ÉCLAIRAGE RENO® LIGHTING

ARCHITECTURAL VANITY SCONCE
INSTALLATION GUIDE

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

ORDER#	MODEL#
R32017	RENO-AUREL-24-VL-NL-BN
R32018	RENO-AUREL-24-VL-NL-BK


PLEASE READ CAREFULLY AND SAVE THESE INSTRUCTIONS, AS YOU MAY NEED THEM AT A LATER DATE.

CAUTION

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.

2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATIONCODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

3. **CAUTION, RISK OF FIRE.** CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

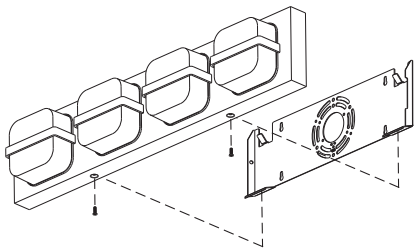

GENERAL


ALL ELECTRICAL CONNECTIONS MUST BE IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODE (N.E.C.) STANDARDS. IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS, PLEASE HIRE A QUALIFIED ELECTRICIAN. REMOVE THE FIXTURE AND ITS COMPONENTS FROM THE BOX AND MAKE SURE THAT NO PARTS ARE MISSING.

PACKAGE CONTENTS

Part	Description	Quantity
A	Fixture Body	1

HARDWARE INCLUDED

Part	Description	Quantity
AA	Mounting Plate	1
BB	Mounting Plate Screw	2
CC	Electric Box Screw	2
DD	Drywall Anchor	4
EE	Mounting Screw	4
FF	Wire Connector	3

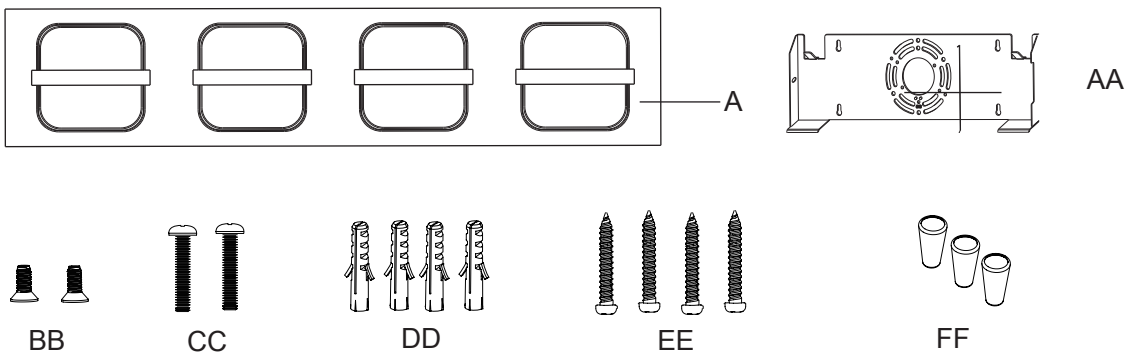

NOTE: This fixture should be used on a 120 Volt fused circuit only 60Hz.

ÉCLAIRAGE RENO® LIGHTING


ARCHITECTURAL VANITY SCONCE
INSTALLATION GUIDE

INSTALLATION

Select a suitable location that can support the weight of the fixture. Determine the method for mounting the fixture before drilling, based on the type of wall.

1 Place the mounting plate (AA) centered on the J-box. Mark the location of the four keyholes on the wall. Drill four 1/8-in. pilot hole into the screw locations marked on the ceiling. You can also use an awl or nail to dimple the screw holes. Install a drywall anchor (DD) and a mounting screw (EE) in each drilled mounting hole, but do not tighten fully. Make the mounting screw (EE) head cross the large ends of the keyholes on the Mounting Plate (AA), slide the base towards the narrow hole, and fasten these screws well. The mounting plate (AA) can be optionally secured to the J-box using Electrical box Screw (CC) for adding stability Pass the electrical wires from the J-box through the middle hole of the mounting plate (AA).

NOTE: The drywall anchors (DD) are only to be used for mounting the fixture to plaster or drywall surfaces

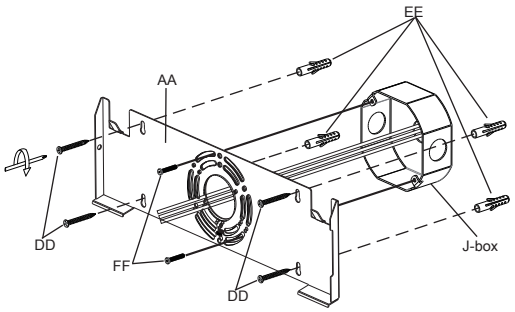


2 Hang the hanging cable on the fixture to the side hole of the mounting plate (AA). Connect the hot and neutral (black and white) wires from the J-box to the same color wires from the fixture body (A). Wrap the ground wire from the electrical box around the ground screw on the mounting bracket (AA), then connect to the green wire from fixture body (A). Cover the wire connections using the wire connectors (FF). Cover the wire connectors (FF) with electrical tape for a more secure connection, then position the wires back inside the J-box.

ADJUSTING THE COLOR TEMPERATURE OF THE LIGHT


Choose your favorite correlated color temperature (CCT) from five options: 2700K warm white, 3000K soft white, 3500K neutral white, 4000K cool white, or 5000K daylight. Move the toggle switch on the bottom of the fixture body (A) to make your selection.

NOTE: The side with screw holes and color temperature switch are the bottom of fixture.

NOTE: The factory setting for the correlated color temperature (CCT) is 3000K, which is the warmest white light.

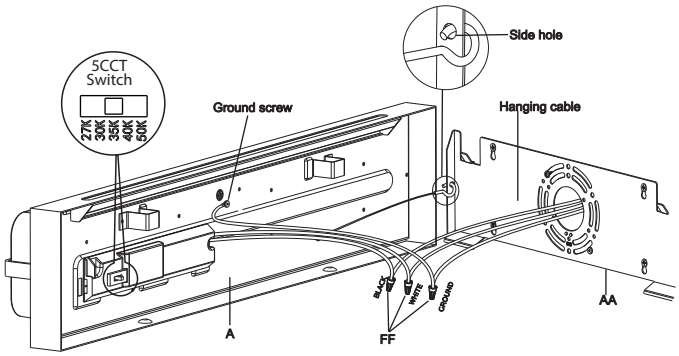

3 Insert the tabs on the top of the mounting plate (AA) into the tabs on the top of the fixture body (A). Place the fixture body (A) against the mounting plate (AA), so that the screw holes on the bottom of fixture body (A) and mounting plate (AA) are aligned. Screw the mounting plate screws (BB) to the panel on the bottom of the fixture body (A) to secure it onto the mounting plate (AA).

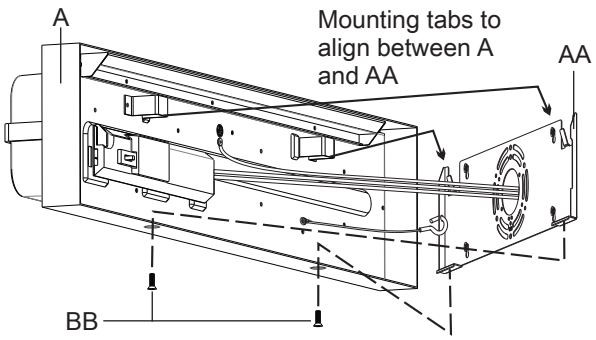


4 This light can be used in one of two modes: Main light mode, or nightlight mode. Selecting main light or night light mode by switching on the wall switch.



NightLight
To switch between the area light and 2000K nightlightmodes, flip the wall switch On/Off/On within three seconds.

nightlight mode

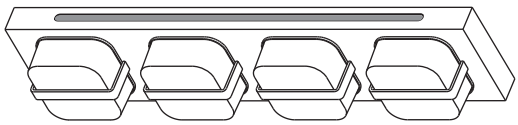

Main light mode