

Date:	Project Name:
Туре:	Part Number:

LED CYLINDER LIGHT INSTALLATION SPECSHEET RENO-CYDL-MW-DV-MCCT-6-WH/BK

\triangle	WARNING
-------------	---------

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

SAFETY: This fixture must be wired in accordance with the national electrical code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. Carefully observe the grounding procedure under installation section. All work should be done by a qualified electrician.


- > RISK OF ELECTRIC SHOCK Disconnect power at fuse or circuit breaker before installing or servicing.
- $> RISK\ OF\ PERSONAL\ INJURY\ -\ Fixture\ may\ become\ damaged\ and/or\ unstable\ if\ not\ installed\ properly.\ Tighten\ all\ fixture\ components\ to\ properly\ for\ the properly\ for\ the\ properly\ for\ the\ properly\ for\ the\ properly\ for\ the\ properl$ their recommended torque values.


WARNING: Make certain power is OFF before starting installation or attempting any maintenance.

CEILING INSTALLATION

1. Adjust the length of the wire according to theactual needs. Select CCT and power according to the requirements. (Fig 1)

2. Secure the mounting plate to the fixture. (Fig 2)

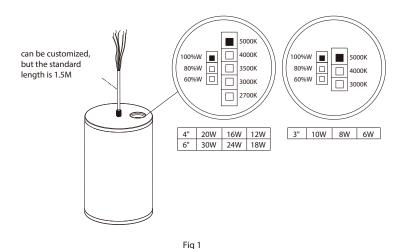




3. Fixed ceiling tray on the ceiling. Put on the safety rope. Connect the wire. (Fig 3)

4. Rotate and snap the light onto the ceiling tray. (Fig 4)

5. Attach the fixing screws. (Fig 5)

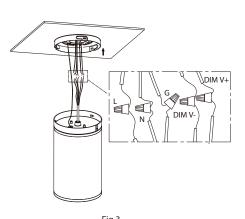





905-604-4666 | info@renolighting.com | www.renolighting.com







Date:	Project Name:
Туре:	Part Number:

LED CYLINDER LIGHT INSTALLATION SPECSHEET RENO-CYDL-MW-DV-MCCT-6-WH/BK


POLE INSTALLATION

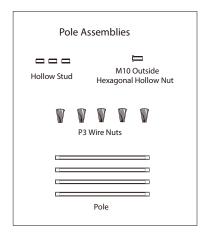


1. Adjust the length of the wire according to theactual needs. Select CCT and power according to therequirements. (Fig 6)

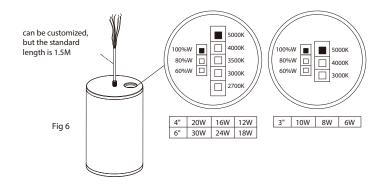


2. Pole and lamp body threaded connection. (Fig 7)

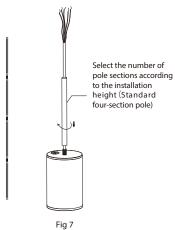

3. Install the hollow thread on the lamp panel. Rod and disc threaded connection. (Fig 8)




4. Fixing the ceiling tray to the ceiling. hang up safety rope. Connect the wire. (Fig 9)

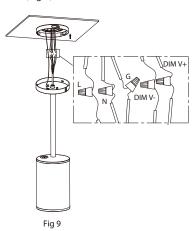

5. Rotate the lamp and attach it to the ceiling plate. (Fig 10)



6. Install fixing screws. (Fig 11)








Date:	Project Name:
Туре:	Part Number:

LED CYLINDER LIGHT INSTALLATION SPECSHEET RENO-CYDL-MW-DV-MCCT-6-WH/BK


DOWNLIGHT PENDANT

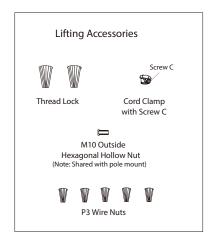


2. Nut connection. Nut to lower screw connection. (Fig 13)




4. Slip on the line buckle and adjust the length of the lanyard. Fixed ceiling tray on the ceiling. Fixed ceiling tray on the ceiling. Connect the wire. (Fig 15)

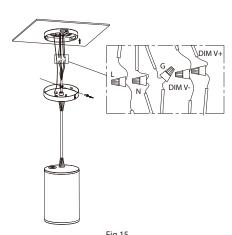


1. Adjust the length of the wire according to theactual needs. Select CCT and power according to the requirements. (Fig 12)

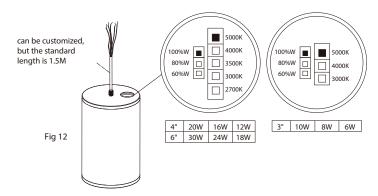

3. Attach the hollow screws to the light panel. Nut to top screw connection. (Fig 14)



5. Rotate and snap the light onto the ceiling tray. (Fig 16)

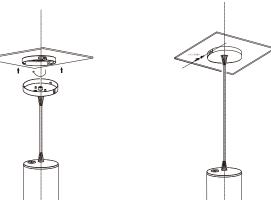

6. Attach the fixing screws. (Fig 17)



905-604-4666 | info@renolighting.com | www.renolighting.com

