

R31920 RENO-TKH-CAB-BK


OVERVIEW

TOOLS REQUIRED (NOT INCLUDED)


- Wiring supplies as per national and local electrical codes
- Hardware/tools required to mount to structure (field provided)

INSTRUCTIONS FOR THE FOLLOWING FIXTURES


Order	Model
R31920	RENO-TKH-CAB-BK

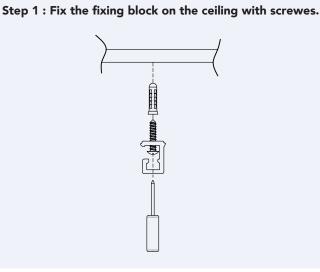


Step 3.1: Place the locker in the round hole of the track.



Step 2 : Pass the cable through the fixed block.

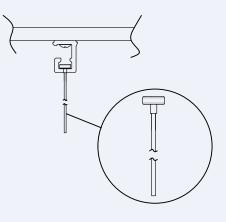

Step 3.2 : Fix the locker with screw.

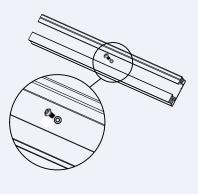

RENO LIGHTING renolighting.com

US Office 8735 Dunwoody Place #6728 Atlanta, GA 30350 1-800-905-9618 **CA Office** 9133 Leslie St #120 Richmond Hill, ON L4B 4N1 1-905-604-4666



R31920 RENO-TKH-CAB-BK

Step 4-1: Insert the cable into the locker.

