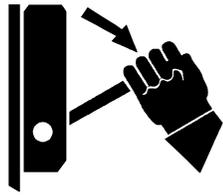
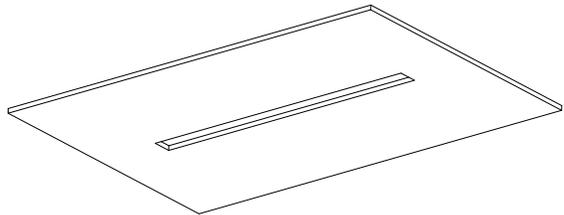
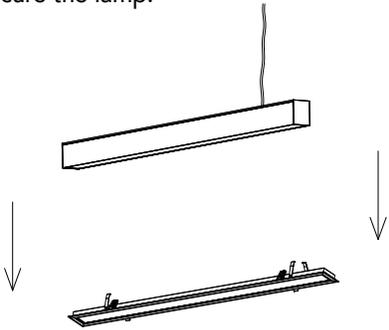
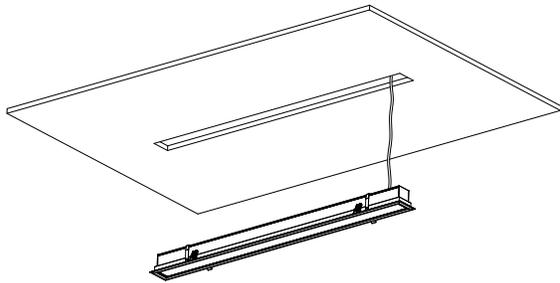
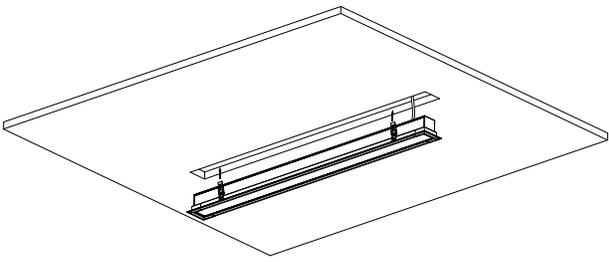


RECESSED MOUNT FRAME FOR ARCHITECTURAL STRIP G2 INSTALLATION INSTRUCTION

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

Order	Model
R39451	RENO-RMF2-WH
R39452	RENO-RMF4-WH
R39453	RENO-RMF8-WH

<p>1 Before installation, Please turn off the switch.</p>  <p style="text-align: center;">OFF</p>	<p>2 Cut a hole on the ceiling according to the fixture's size.</p>  <table border="1" data-bbox="909 987 1128 1081"> <thead> <tr> <th>Fixture Length</th> <th>Hole Size</th> </tr> </thead> <tbody> <tr> <td>2FT</td> <td>620*85mm</td> </tr> <tr> <td>4FT</td> <td>1220*85mm</td> </tr> <tr> <td>8FT</td> <td>2420*85mm</td> </tr> </tbody> </table>	Fixture Length	Hole Size	2FT	620*85mm	4FT	1220*85mm	8FT	2420*85mm
Fixture Length	Hole Size								
2FT	620*85mm								
4FT	1220*85mm								
8FT	2420*85mm								
<p>3 Put the lamp body on the frame and use the clips to secure the lamp.</p> 	<p>4 Wire the lamp with quick connectors.</p> 								
<p>5 Turn the clasp 180 degree at the same time and slowly push the fixture with frame to the opened ceiling. After that, the clasp will turn back and hold the fixture.</p> 	<p>6 Installation completed.</p> 